







### **Table of Contents**

<b>1</b> UC40 (	Overview		 	 	 	 	 	 	 	 		 • •	 	. 2
2 Configu	uration		 	 	 	 	 	 	 	 	• •	 	 	3
21 Pref	light		 	 	 	 	 	 	 	 		 	 	. 3
2.2 Con	necting You	System	 	 	 	 • •	 	 	 	 	• •	 • •	 	. 3
	allation													
3 Operat	ion		 	 	 	 • • •	 	 	 	 	• •	 • •	 	. 5
4 Trouble	eshooting		 	 	 	 	 	 	 	 		 	 	6
	cal Specifica													

# Overview

The UC40 is a 40-button single system USB controller. The easy to read color coded buttons provide essential show control functions for PlaybackPro Plus.






# 2.1 PreFlight

Each version of macOS has specific settings which have a great impact on playback performance. Before you begin, please visit <a href="https://www.dtvideolabs.com/preflight">www.dtvideolabs.com/preflight</a>. This page also includes a link to a printable PDF if needed.



## 2.2 Connecting Your Systems

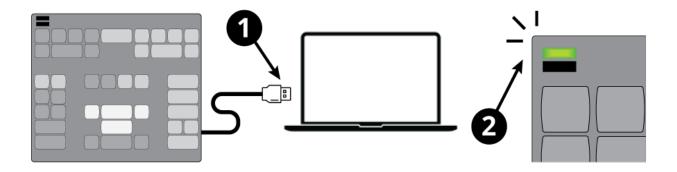

- (1) Connect the controller to your Mac using the attached USB cable (an adapter may be required for USB-C)
- (2) A green LED light will illuminate on the controller.

Your controller is ready to use. If a dialog box appears or the green LED light does not illuminate on your controller proceed to the steps in the next section.

# 2.3 Installation

DT Videolabs USB controllers are custom keyboards and will communicate with the Mac via keystrokes. When the controller is connected to a computer for the first time a dialog box may appear stating that the keyboard cannot be identified. Click "Continue" to go through the steps for keyboard connection.



If you plug in the controller and you are not presented a dialog box as shown, go to System Preference > Keyboard and select "Change Keyboard Type".



The next dialog will ask you to press a key which is not available on DT Videolabs controllers. Press the "esc" key on the Mac keyboard and then click on the "Skip" button to proceed to the final step.

Select the "ANSI" (United States and others)". Selecting any other keyboard option will not allow the controller to function properly.





Goto	Moves Preview clip's playback position to In Point	Goto	Moves Program clip's playback position to In Point						
<<	Fast reverse Preview clip	<<	Fast reverse Program clip						
>>	Fast forward Preview clip	>>	Fast forward Program clip						
Goto Out	Moves Preview clip's playback position to Out Point	Goto Out	Moves Program clip's playback position to Out Point						
<	Steps back Preview clip one frame	<	Steps back Program clip one frame						
>/	Play/Pause Preview clip	>/	Play/Pause Program clip						
>	Advances Preview clip one frame	>	Advances Program clip one frame						
Take Fade -	Decreases Program clip's cross fade time on Take	Goto 10	Go to 10 seconds from the Program clip's Out Point						
Take Fade +	Increases Program clip's cross fade time on Take	Goto 20	Go to 20 seconds from the Program clip's Out Point						
Take -	Decreases transition of Preview clip to Program	Goto 30	Go to 30 seconds from the Program clip's Out Point						
Take +	Increases transition of Preview clip to Program	End -	Decreases Program End Fade time *						
Prev	Loads previous clip in playlist into Preview	End +	Increases Program End Fade time *						
Clear	Clears Preview clip	End All	Ends playback of Program clip 🛧						
Next	Loads next clip in playlist into Preview	Loop-	Decreases Loop Duration value						
Take	Takes Preview clip to Program	Loop Temp	Temporarily Loops or Un-loops Program clip						
Set In	Sets Preview clip's In Point ★	Loop+	Increases Loop Duration value						
Set Out	Sets Preview clip's Out Point ★	Freeze Temp	Temporarily freezes Program clip at Out Point						
Set In	Sets Program clip's In Point ★	Link-	Decreases Preview to Program Cross Fade duration						
Set Out	Sets Program clip's Out Point ★	Link Temp	Temporarily Links or Unlinks Preview and Program clips						
Save	Saves the Show File	Link+	Increases Preview to Program Cross Fade duration						



- (1) If the green LED light on the controller does not illuminate when plugged into the computer then there may be a programming issue with the controller. Please contact <a href="mailto:technical@dtvideolabs.com">technical@dtvideolabs.com</a> We may be able to remotely reprogram the controller via screen share.
- (2) If the controller keys are not responding as they should, the wrong type of keyboard may be assigned. Go to System Preferences and select Keyboard. In the lower left corner select "Change Keyboard Type" and follow the steps above.
- (3) DT Videolabs controllers have a 1 year warranty. If the controller is physically damaged the warranty does not apply.



#### **Technical Specifications**

	UC40
Weight	9.6oz, .27kg
Height	1.5", 3.81cm
Depth	5.75", 14.6cm
Width	3.75", 9.52cm